

# Pellet stove (air+hydro) Family Bear IT

/ assembling , spare part diagram /

- 1 - Plate holder for control panel
- 2 - Control panel
- 3 - Top plate
- 4 - Pellet reservoir
- 5 - Pellet reservoir cover
- 6 - Cover of turbolators cleaner
- 7 - Up holding plate
- 8 - Air heat exchanger
- 9 - Turbolators handle
- 10 - Turbolators holder
- 11 - Turbolators
- 12 - Heating air canal plate
- 13 - Bolts for connecting air exchanger
- 14 - Automatic air vent
- 15 - Expansion vessel 8 L
- 16 - elbow 1/2 "
- 17 - Heating Fans (2 pcs)
- 18 - Igniter
- 19 - Combustion Fan
- 20 - Circulation pump
- 21 - Auger set
- 22 - Motor for auger
- 23 - Base holder plate
- 24 - Right side cover
- 25 - Left side cover
- 26 - Main board plate holder
- 27 - Main board
- 28 - Heat water exchanger
- 29 - Front Face Set
- 30 - Burning Pot
- 31 - Cover plate of cleaning department
- 32 - Door
- 33 - Ceramic Glass
- 34 - Rope
- 35 - Handle
- 36 - Leveler holders

